January, 2011

Subject: BD-S1900/BD-S1065 Software Update Version 1.14

Yamaha is pleased to offer the following software update to ensure the best possible performance and latest features for your Yamaha BD-S1900 / BD-S1065 Blu-ray Disc Player.

This software includes improvements to playback certain Blu-ray discs such as ALIEN 3/4, BEAUTY AND THE BEAST, BROOKLYN'S FINEST, FIREFLY, PRINCE OF PERSIA, SNOW WHITE AND SEVEN DWARFS and others recently released on the market.

CHECK YOUR UNIT'S SOFTWARE VERSION PRIOR TO THIS UPDATE
The software version consists of 2 letters followed by 7 numbers. Check the 5 numbers to the left. If the 5 numbers are **"92009"**, you **DO NOT** need to perform this update.

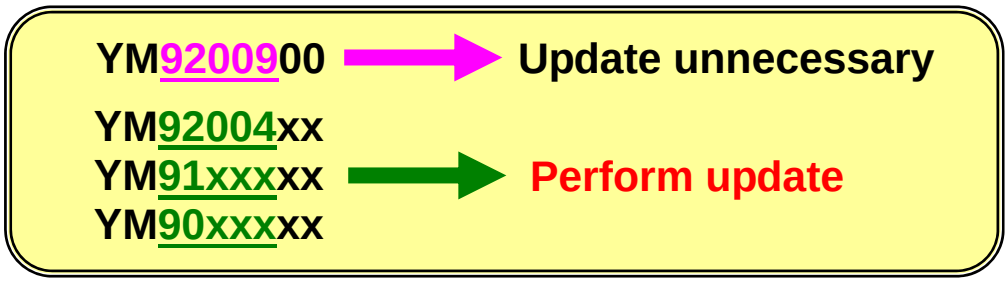

How to check your software version:
Press [SETUP] button on the remote controller. Then, select **"Settings"** > **"Version"**. Your current software version will appear on TV.

If your version is smaller than **"92009"**, perform the software update. There are 2 methods you can choose from. Click the one you wish to perform.

- Update Disc Method
  (Burning update file onto CD-R or CD-RW disc is required)
- USB Thumb Drive Method
  (Must be able to access the USB port located on the back of the unit)

< IMPORTANT NOTICE >
Do not attempt to update your Yamaha Blu-ray Disc Player using any other data file except those provided directly from the Yamaha website.

Follow the instructions carefully and do not attempt any other procedures not specified in the instructions provided by Yamaha.
Improperly updated products may cause improper operation, and any parts or service required to restore proper operation will not be covered under the Yamaha Limited Warranty.

Update Disc Method

STEP1 **Preparation of update disc.**
Burn the downloaded update file “YMBD_114.MVP” onto a CD-R or CD-RW as data disc with ISO9660 format. Make sure the disc is finalized. This will be your update disc.

STEP2 **Power on the Blu-ray Disc Player.**
Wait till “NO DISC” appears.

STEP3 **Set the update disc in the Blu-ray Disc Player.**
Eject the disc tray and load the update disc.

STEP4 **Update will start automatically. Wait till the disc ejects.**
Front display will change as follows:

While update is in progress, **DO NOT** interrupt the power or press any buttons.
When the update is completed, Blu-ray Disc Player will eject the disc tray and power itself off automatically.
(Front panel display beneath the opened disc tray will turn off)

In case the update doesn’t start, check the **troubleshooting section** on the last page.

STEP5 **Remove the update disc and power on.**

STEP6 **Check the updated version.**
Using the remote controller, press [SETUP].
From the TV screen, select “Settings” > “Version”.
Confirm that the updated version is **“YM9200900”**

STEP7 **Exit from setup menu.**
Press [EXIT] button on the remote controller to exit from setup menu.

Congratulations!

You have completed the software update.
Your Blu-ray Disc Player is now ready for normal use.

USB Thumb Drive Method

STEP1 **Copy the update file to a USB thumb drive.**

Using your computer, copy the downloaded update file "YMBD_114.MVP" into the root directory of a USB thumb drive that supports USB Mass Storage Class. (It is recommended to delete all other files or folders)

STEP2 **Power on the Blu-ray Disc Player.**

STEP3 **Enter "Software update".**

On the remote controller, press the [SETUP] button.
Then select "Settings" > "Software Update".

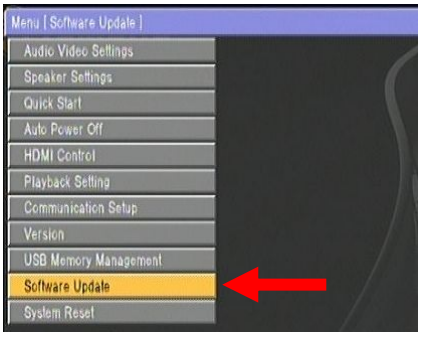

If password is set for your Blu-ray Disc Player, enter the 4-digit number using the 10 keys on the remote controller.

STEP4 **Follow the instructions on TV screen.**

Insert USB drive to the USB port located on the rear of this unit.

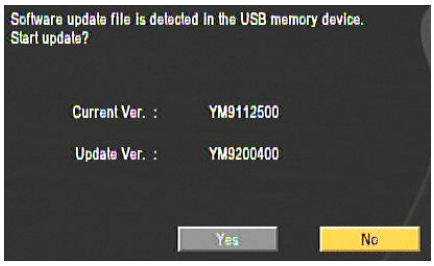

Software data in the USB drive will be checked.

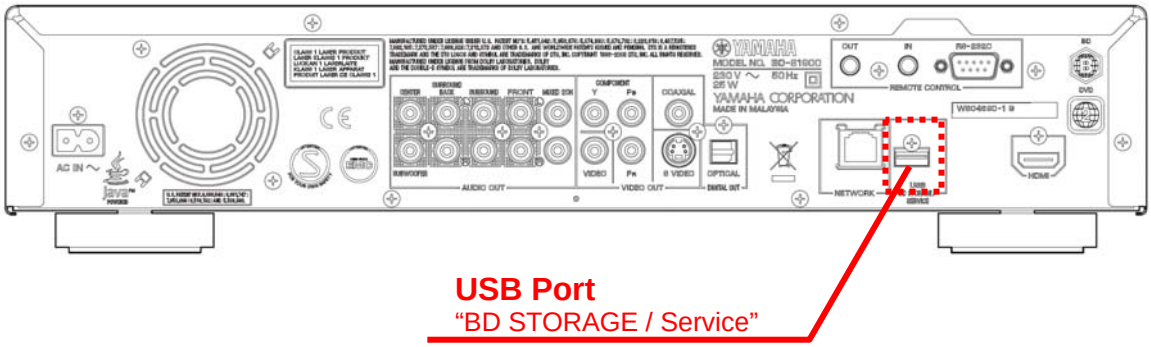

STEP5 Start software update

Select “Yes” and press [ENTER] on the remote controller to start the update.

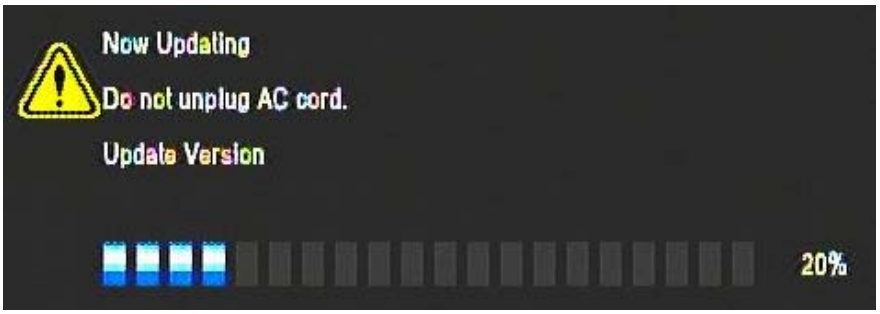

While update is in progress, **DO NOT** interrupt the power or press any buttons.
When the update is completed, Blu-ray Disc Player will power itself off automatically. (The front panel display will turn off)

If the update doesn’t start, check the **troubleshooting section** on the last page.

STEP6 Remove the USB Drive and power on.

STEP7 Check the updated version.

Using the remote controller, press [SETUP].
Select “Settings” > “Version”.
Confirm that the updated version is “**YM9200900**”

STEP8 Exit from setup menu.

Press [EXIT] button on the remote controller to exit from setup menu.

Congratulations!

You have completed the software update.
Your Blu-ray Disc Player is now ready for normal use.

Troubleshooting

< Update Disc Method >

Case1: After loading the update disc, the Blu-ray Disc Player doesn't start the update.

- ✓ Check if the update disc is finalized.
- ✓ Check that the downloaded update file "YMBD_xxx.MVP" is the only file recorded in the disc.
- ✓ Make sure the file name of the update file is not renamed.
- ✓ Burn the downloaded update file again using another disc. (CD-R is recommended)

Or, try the USB thumb drive method.

Case2: Unintended error occurred during the update

Solution:
The Blu-ray Disc Player will restore original software version. Retry the procedure from STEP1 again.

Or, check your current software version. In case the software version in the disc is as same as or older than the current one, "ERROR" will be displayed during the update.

< USB Thumb Drive Method >

Case1: Blu-ray Disc Player cannot verify the update file in the USB drive.

- ✓ Check that the update file is located in the root directory of the USB drive.
- ✓ Check that no folders are created in the USB drive.
- ✓ Check that no files other than the update file "YMBD_xxx.MVP" is stored in the USB drive.
- ✓ Make sure the file name of the update file is not renamed.
- ✓ Try with another USB drive.

Or, try the update disc method.

Case2: Unintended error occurred during the update.

Solution:
The Blu-ray Disc Player will restore original software version. Retry the procedure from STEP1 again.